



Kindle Fire HD 2012 Speakers Replacement

This guide will show the user how replace the left and right speakers.

Written By: Jessica Valladarez





TOOLS:

- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)



PARTS:

- [Kindle Fire HD 7" \(2012, 1st Gen\) Left Speaker](#) (1)
- [Kindle Fire HD 7" \(2012, 1st Gen\) Right Speaker](#) (1)

Step 1 — Speakers



- Using the plastic opening tool, carefully insert the opening tool on all four corners of the Kindle Fire and lift up until you hear a slight popping noise

Step 2



- Using the plastic opening tool, start from one corner and go around the Kindle Fire using the tool in a down and up motion to continue to pop off the backing.

Step 3



- The Kindle Fire could possibly have tape on the inside, so take caution and look before attempting to remove the back.
- After you lift all four corners and you check for tape, it is safe to proceed.

Step 4




- Once all the plastic clips holding the screen to the plastic back of the Kindle Fire are separated, the back should be safe to lift up completely.



- Locate the 4 Phillips #00 screws and use the Phillips head screwdriver to unscrew them.

Step 6

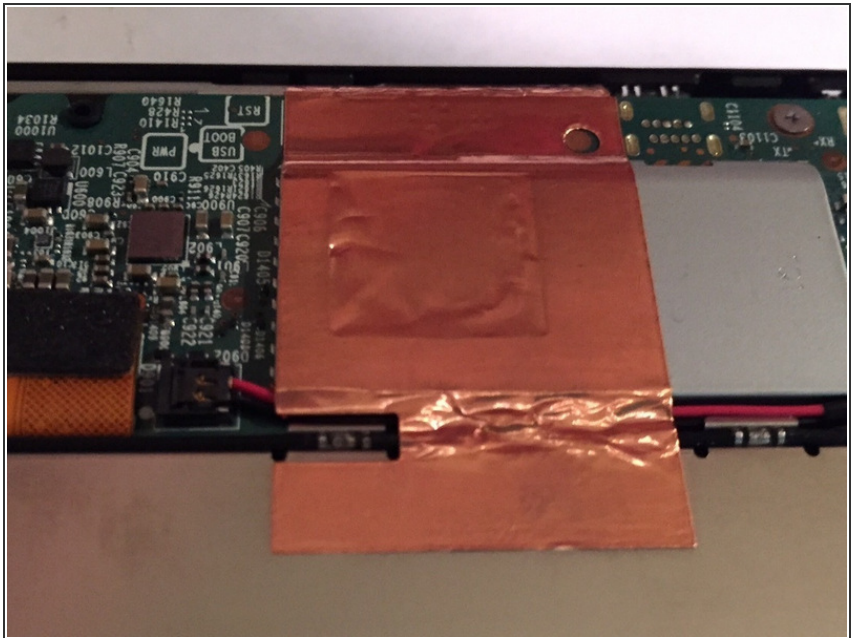

- If your device has copper tape attached to the battery, carefully peel it off the battery.

Step 7




- Locate the antenna cable connector which is easier to find if you look for the gold tipped black wire that surrounds the battery.

Step 8




- Lift and pull up the power connector cable that surrounds the battery

Step 9

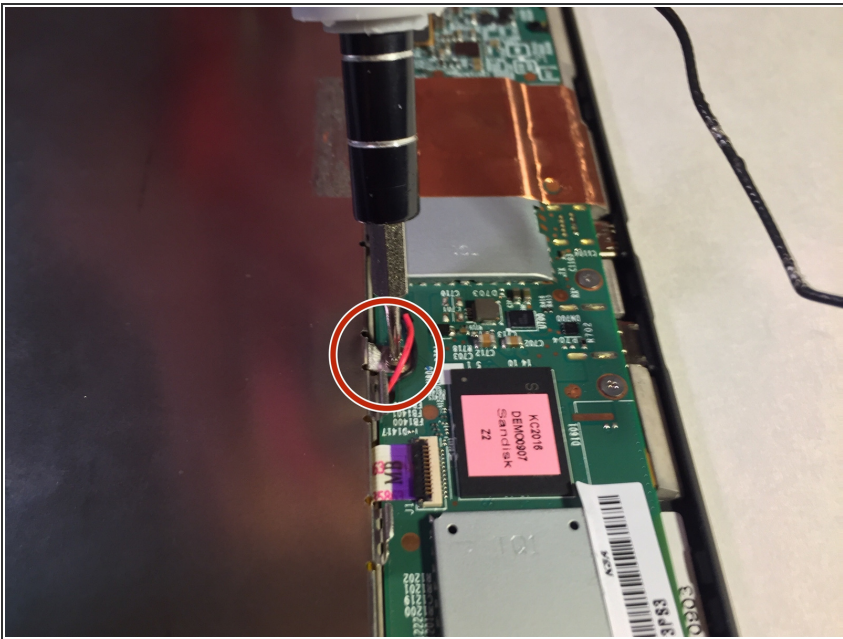

- Locate the 1 T5 Torx screw and unscrew it.

Step 10

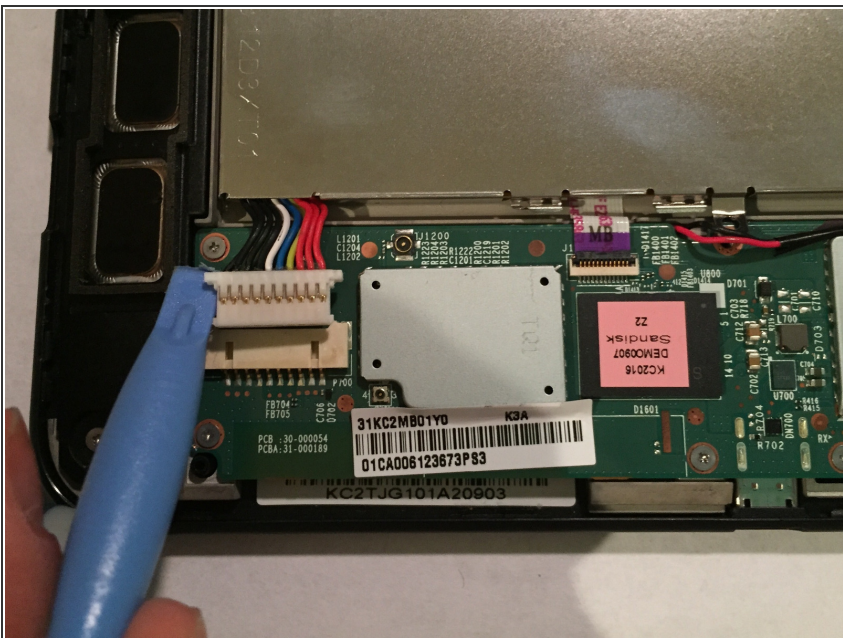


- Use the plastic opening tool to remove the plastic piece that connects the wires to the motherboard

Step 11




- Lift the battery out of the device with your finger or the plastic opening tool.

Step 12

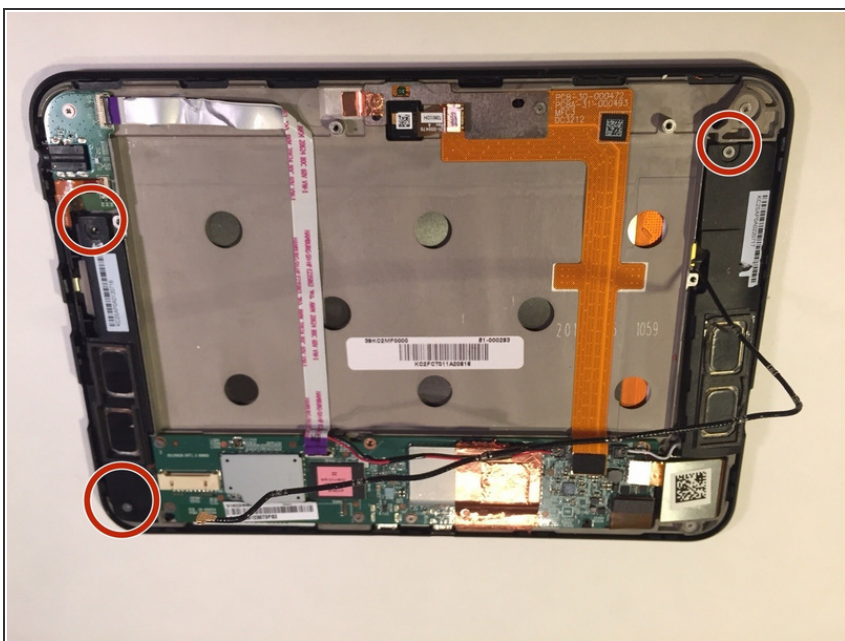



- Look at the speakers on the left and right side of your device. Unscrew the three 2 mm screws that hold the speakers down with the Phillips #000 screwdriver.

Step 13

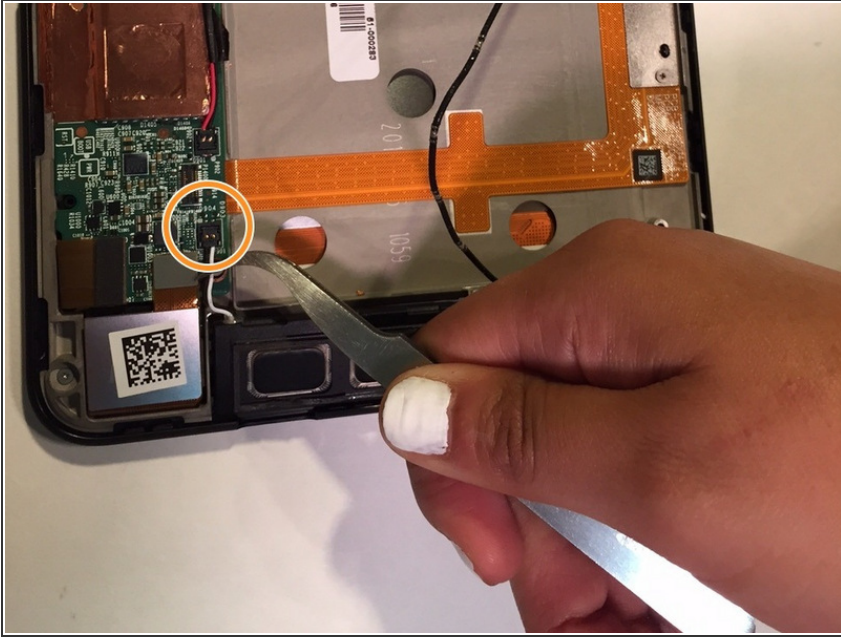


- Locate the black and white wires that are connected to the plastic black piece.
- Use the tweezers to lift up the wires.

Step 14

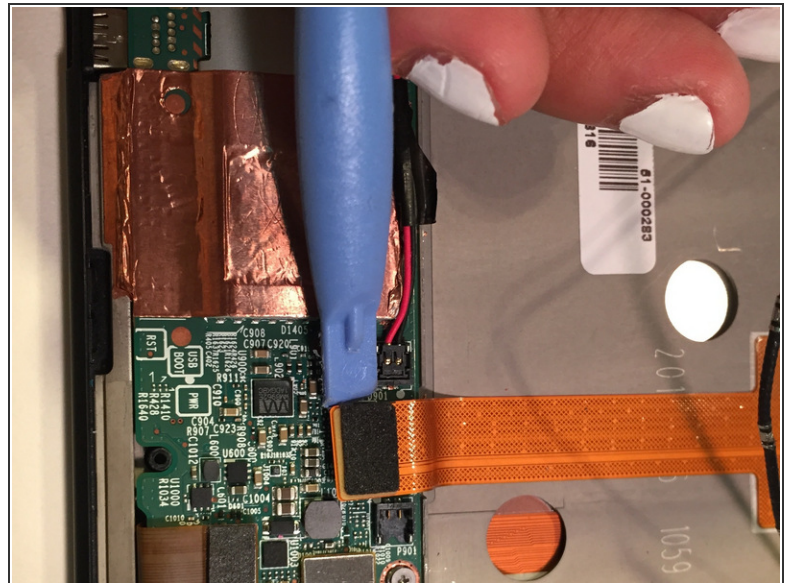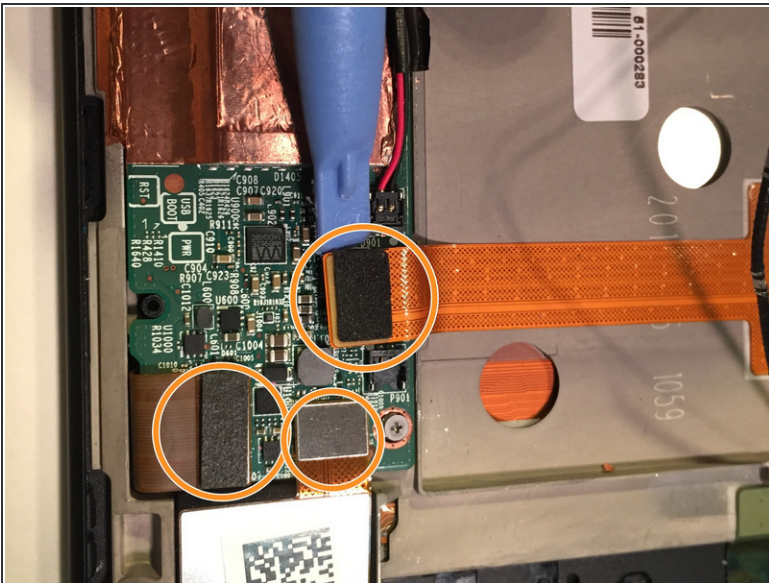


- Look at the motherboard and lift up the three copper flaps with your plastic opening tool

Step 15

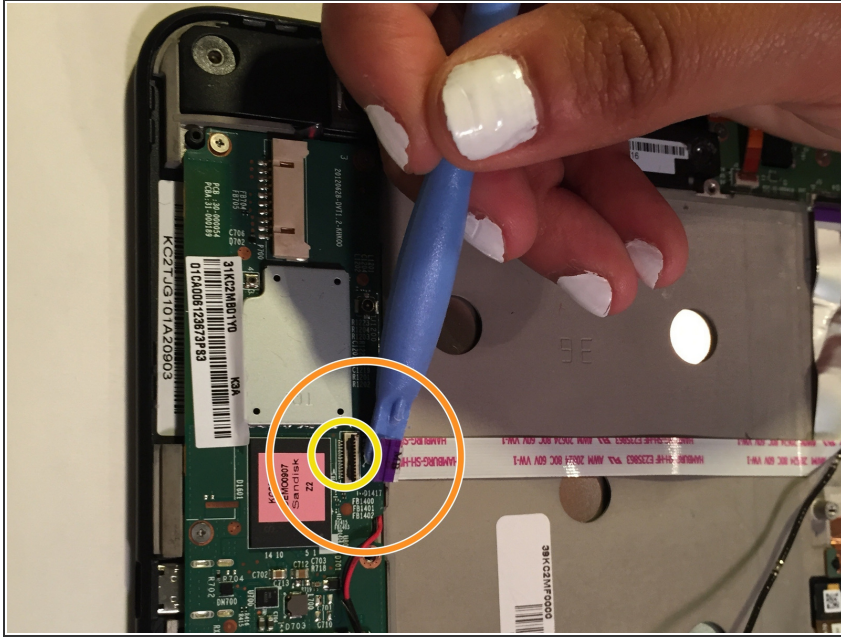



- Locate the purple flap in the middle of the motherboard.
- Lift up the little black flap to disconnect the purple flap.

Step 16

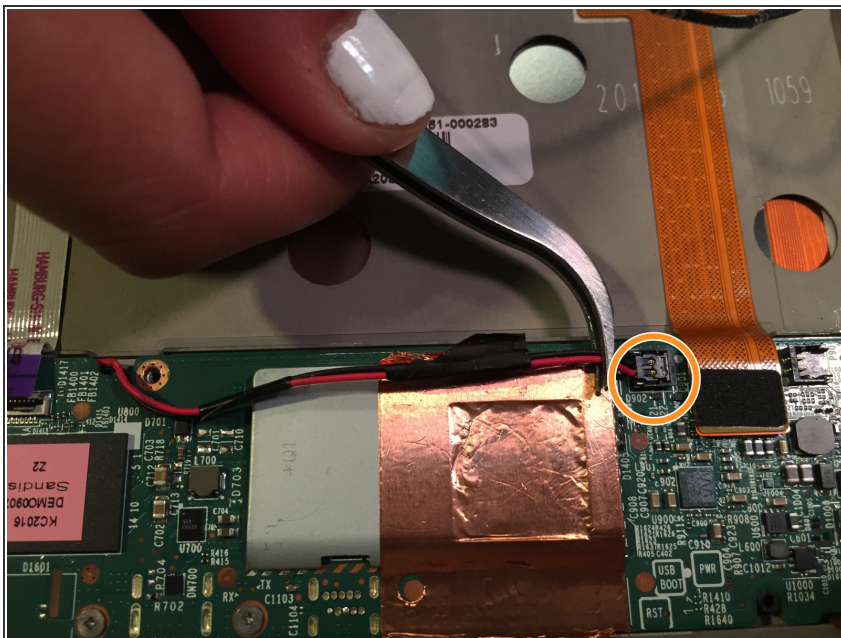



- Locate the red and black wire that is connected to the plastic black piece.
- Use the tweezers to lift up the wires.

Step 17

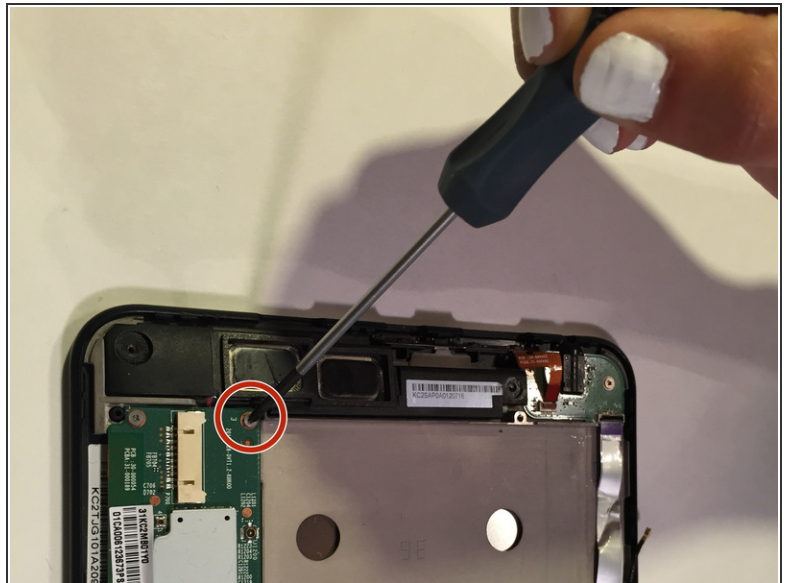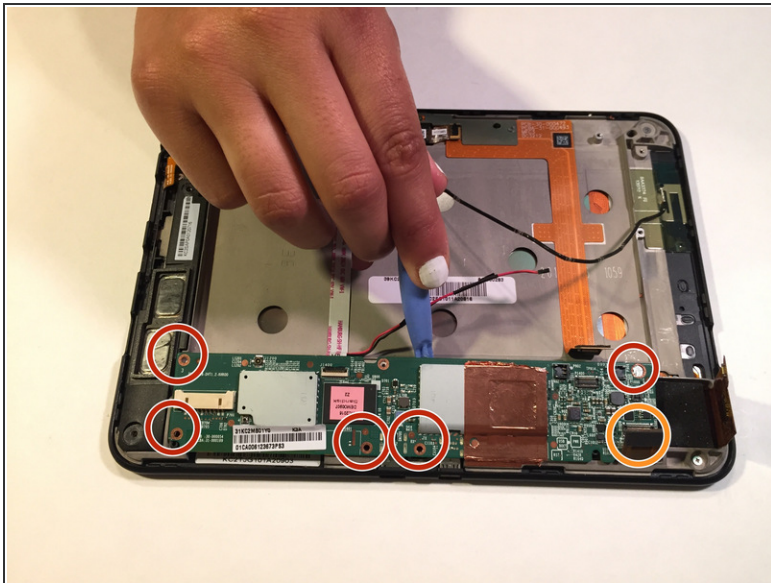

- Locate the five 3 mm screws and unscrew them with the Phillips #00 screwdriver.
- Remember to unscrew the 3 mm screw underneath the cooper flap.

Step 18

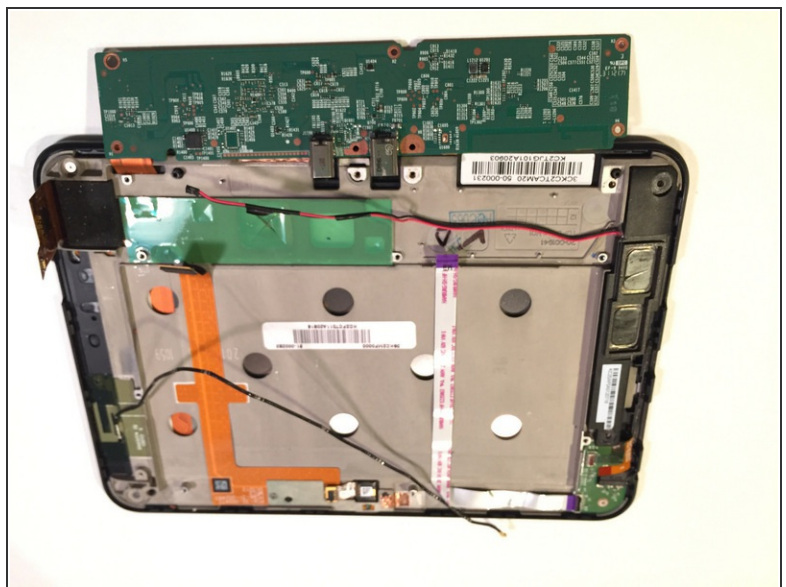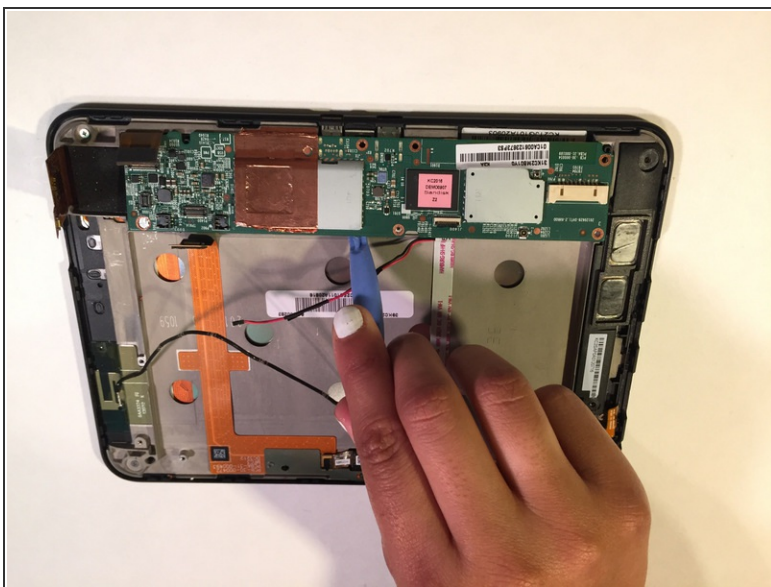

- In order to remove the black and red wire, you must first remove the motherboard.
- Now it is safe to remove the left and right side speakers out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 12:06:05 AM.